




B BETA FENCE

Assembly Gabions



Step 1 : Flat Packed

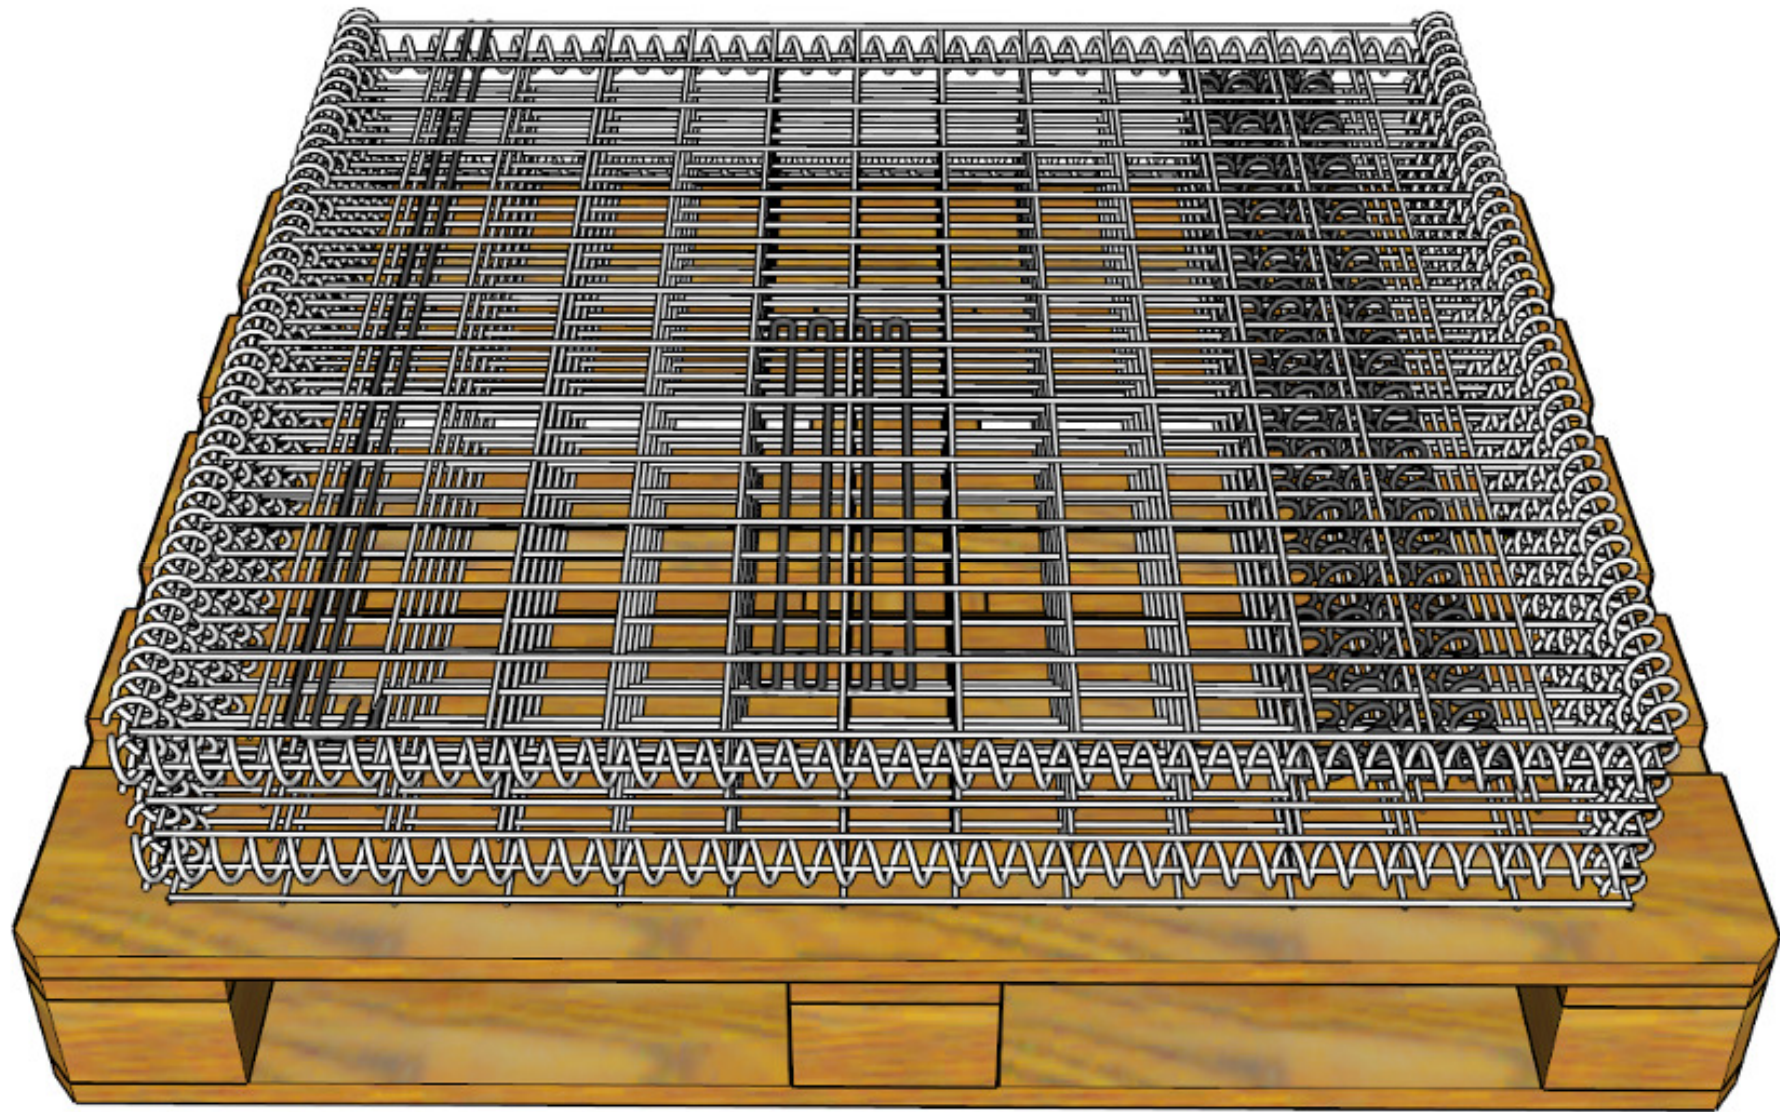

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464


Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com

B BETAFENCE



Step 2 : Opened Gabion

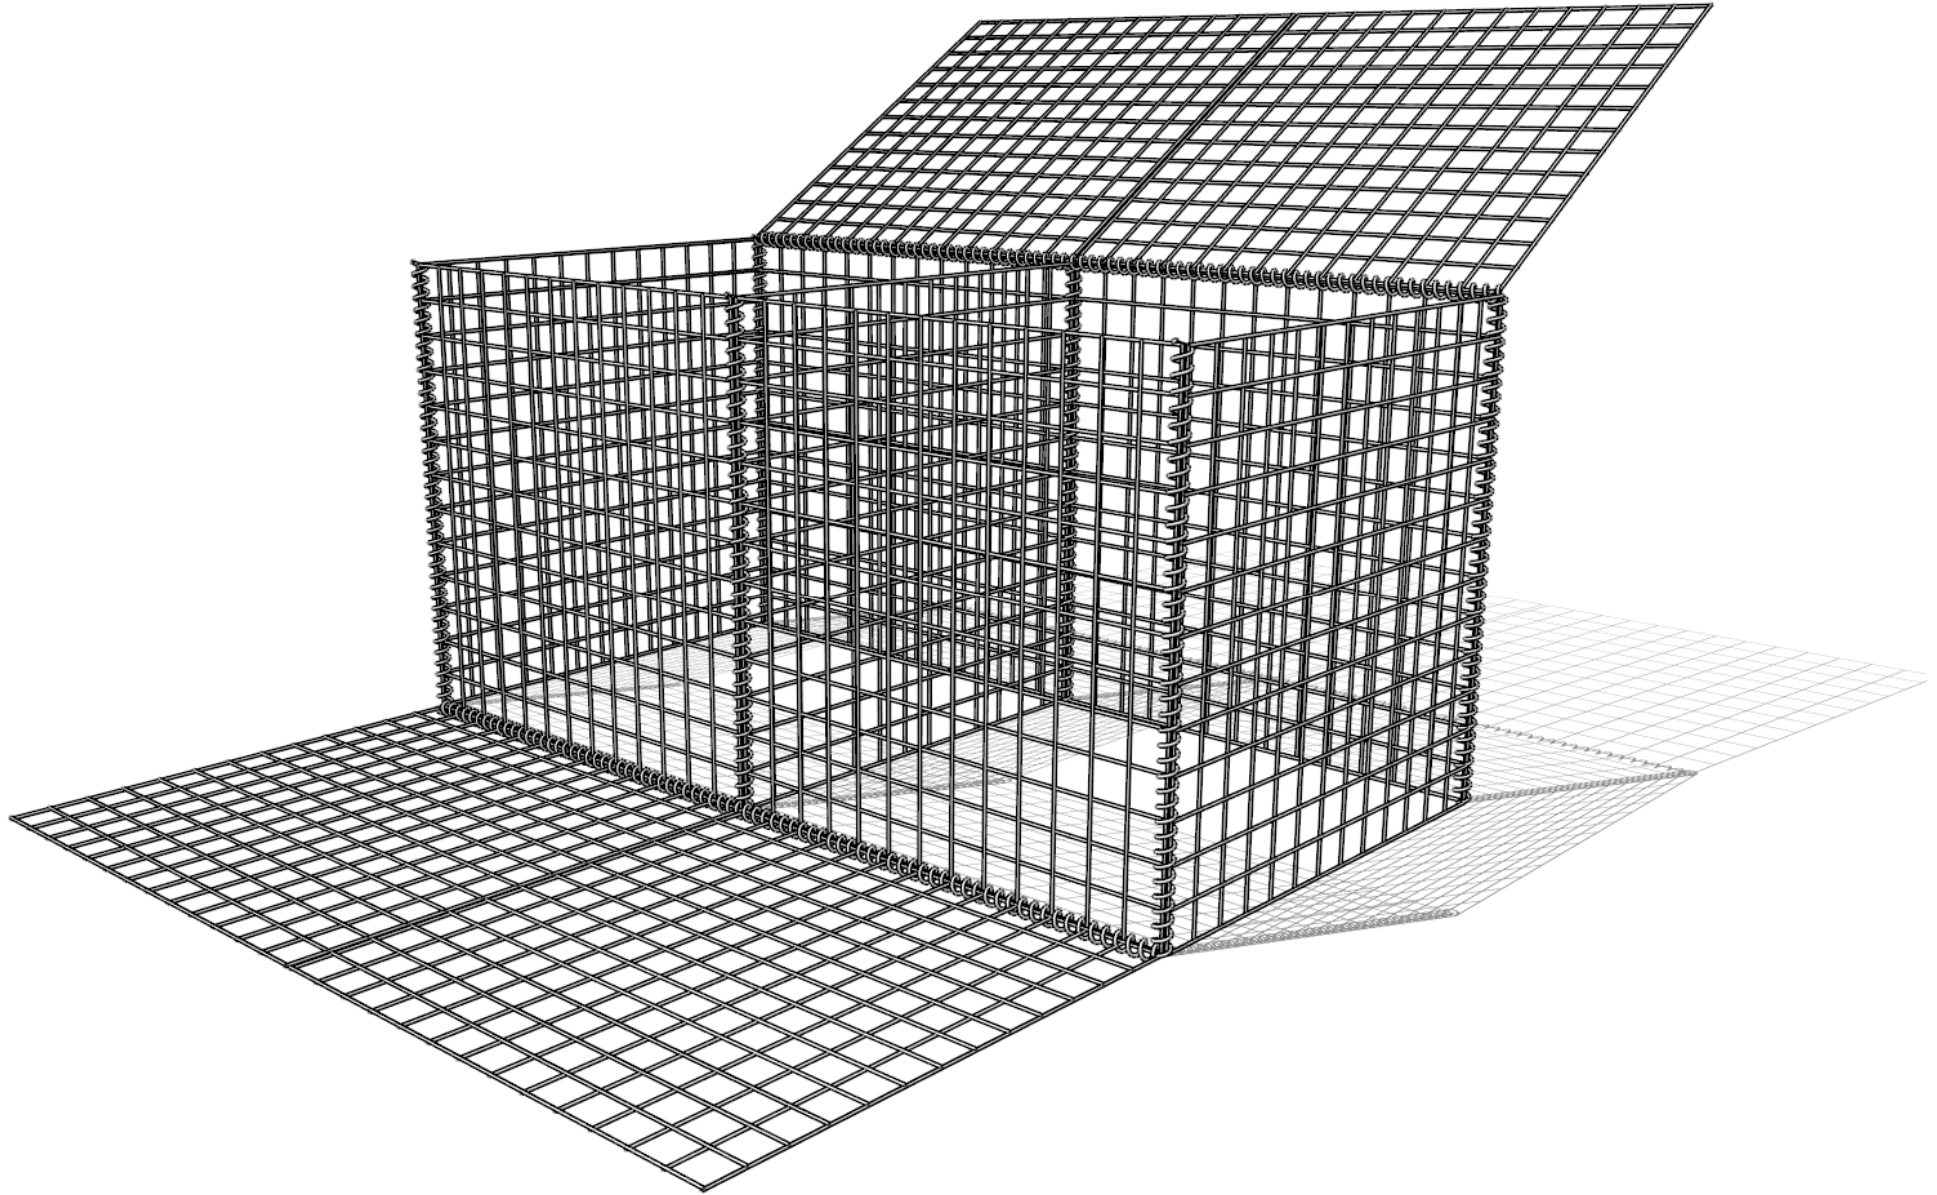

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464


Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com

B BETAFENCE



Step 3 : Overview Accesories

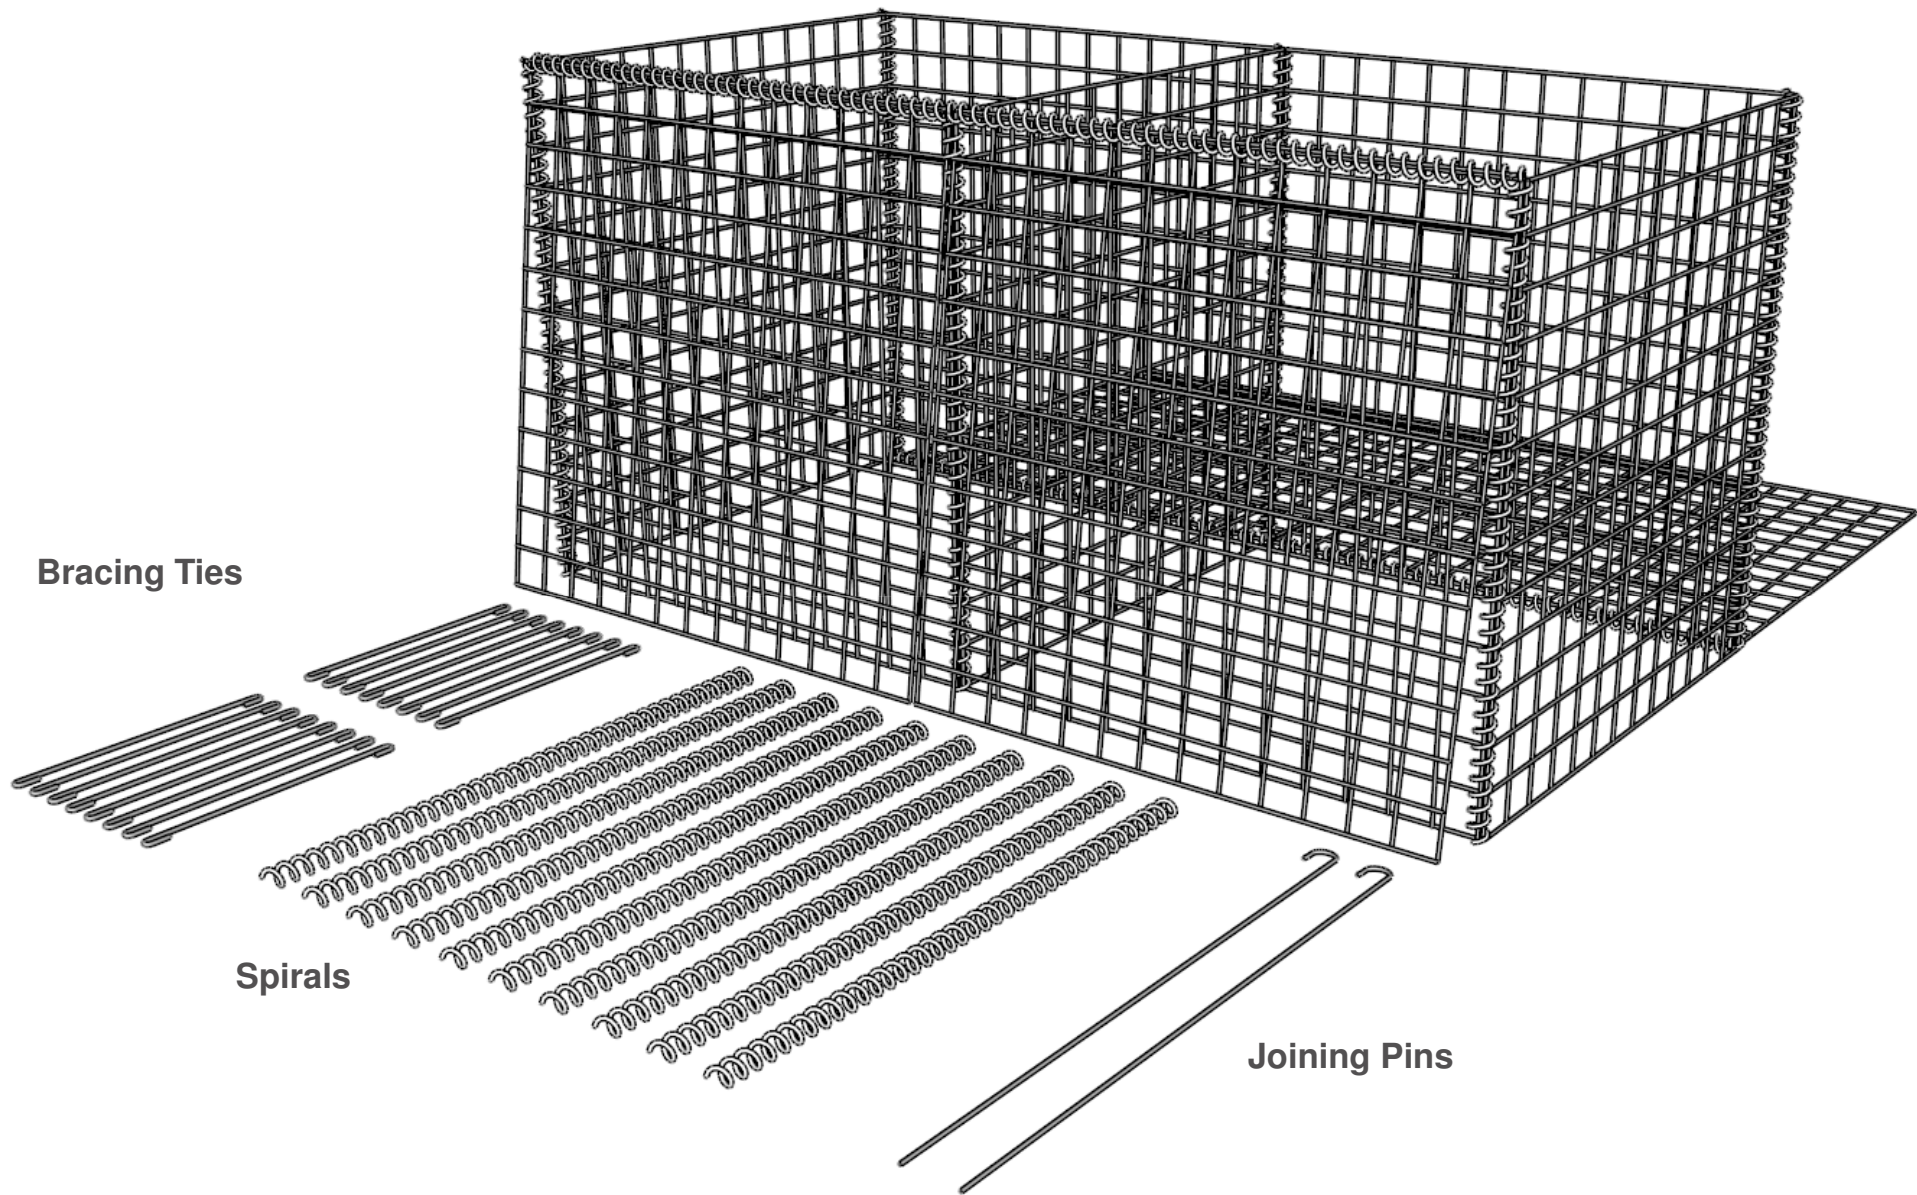

Eggermont Frédérique

Gabion Designer


GSM: +32 (0) 479 850 464

Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com

B BETAFENCE

Step 4 : Closing the lid

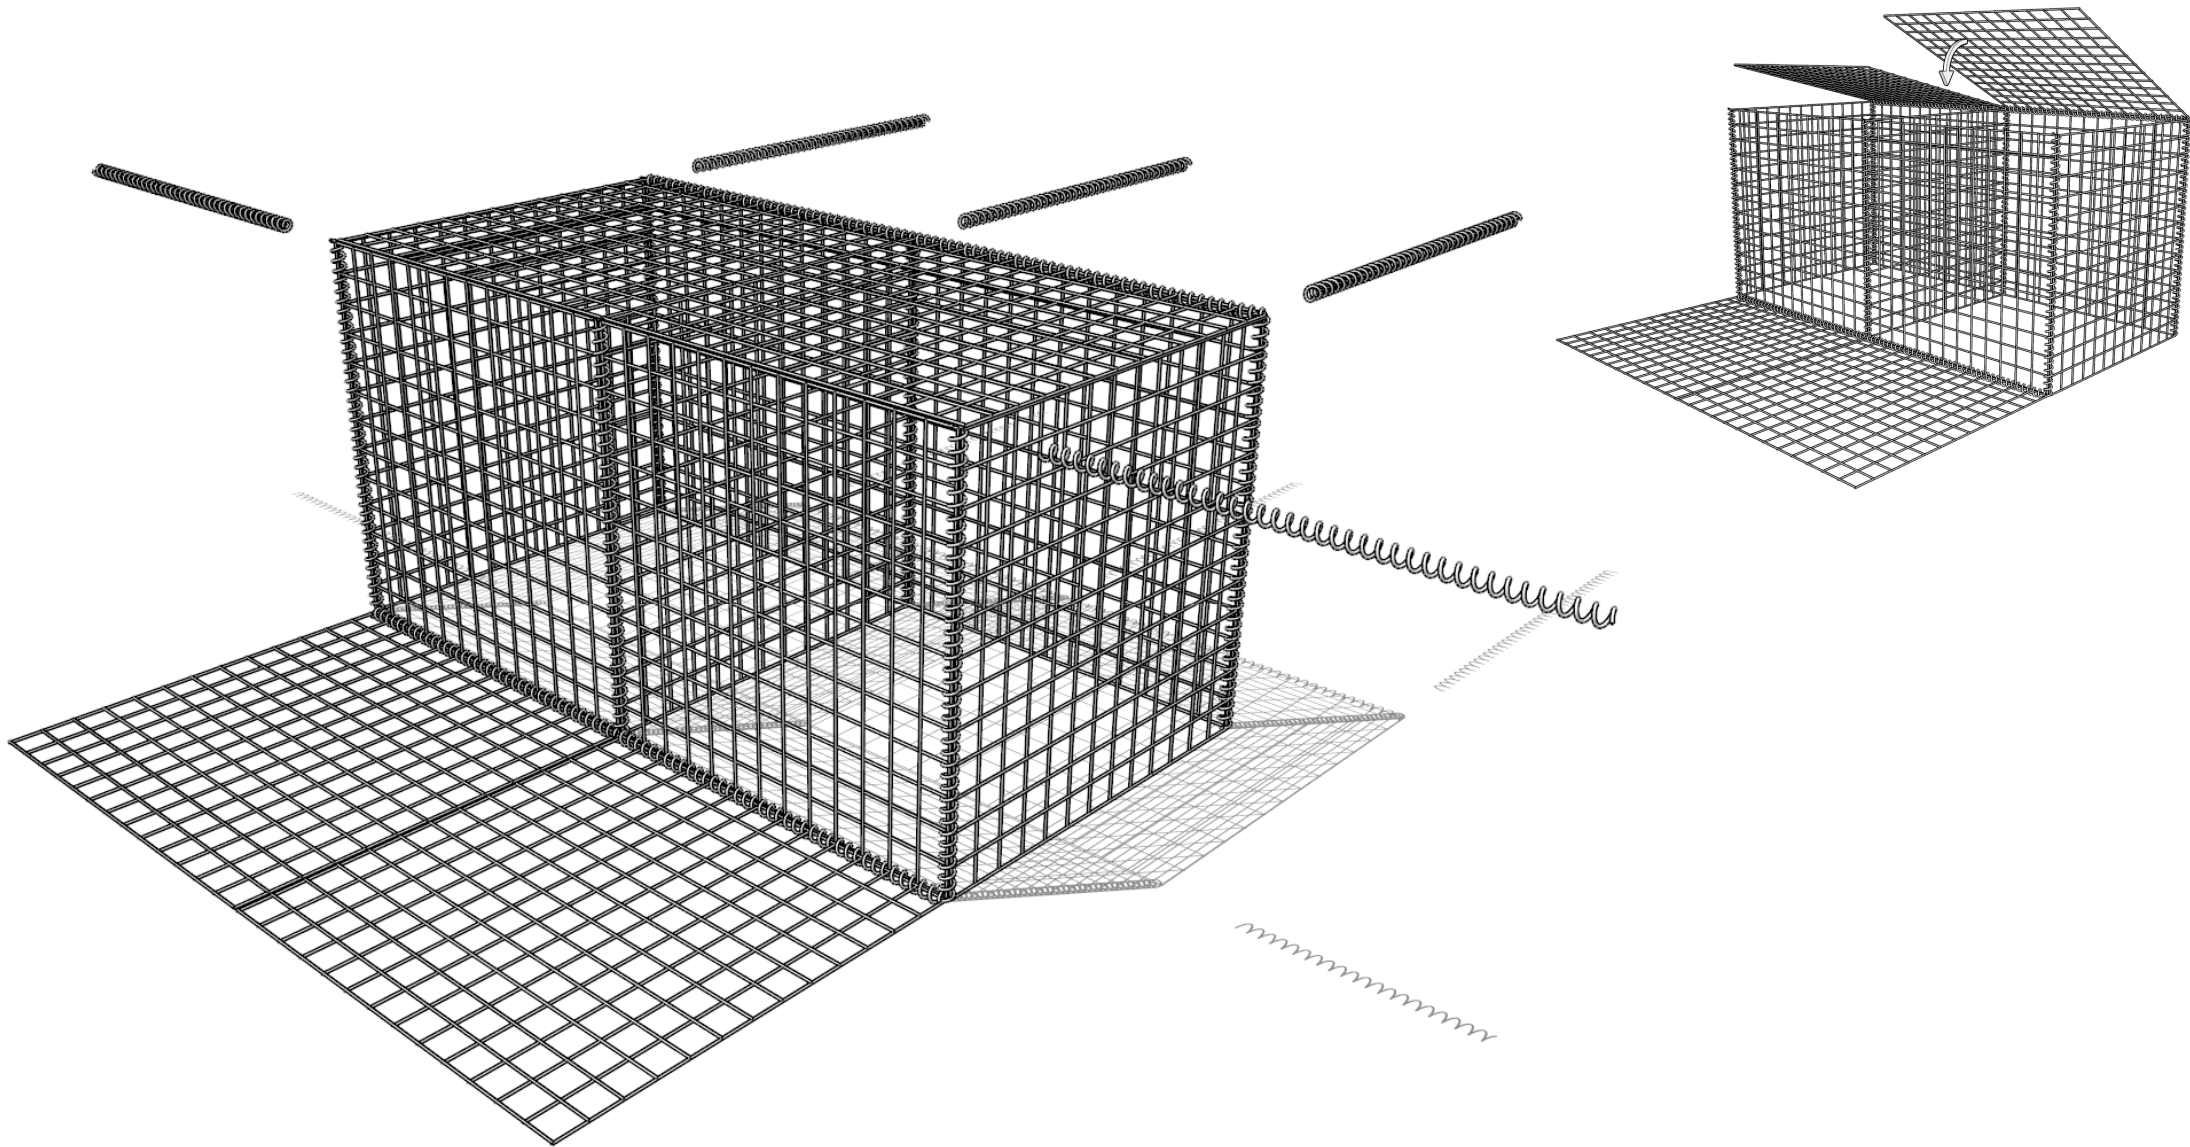

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464

Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com




B BETAFENCE



Step 5 : Turn the Gabion

After installing the spirals ,
secure them by bending the
ends inwards with pliers.

Then turn the Gabion.

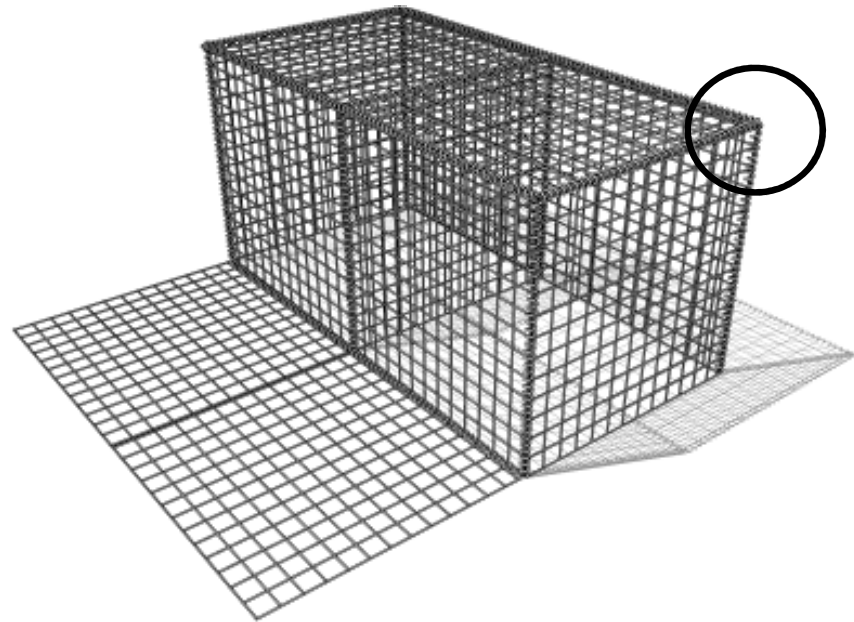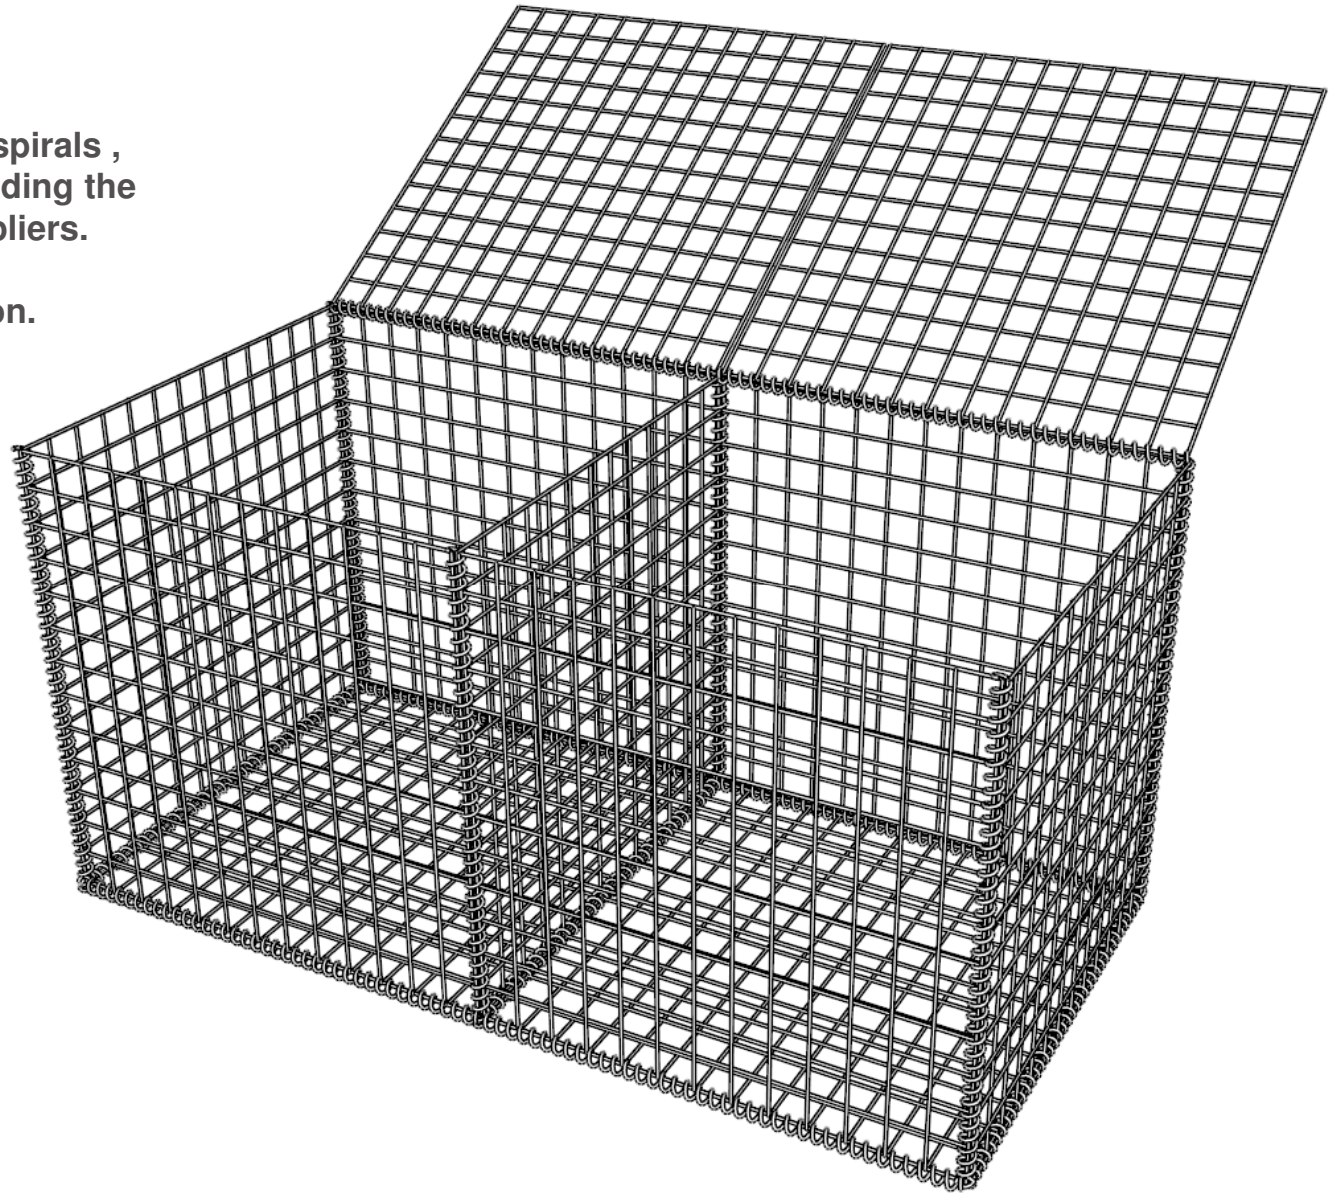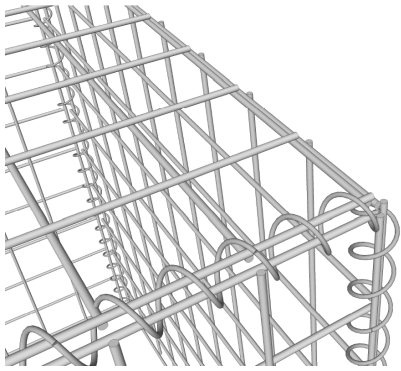

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464

Tel : +32 (0) 56 73 46 64



frederique.eggermont@betafence.com

B BETAFENCE



Step 6 : Fill the first third of the Gabion and apply bracing ties

Bracing ties are usually placed after filling the first part of the gabion.

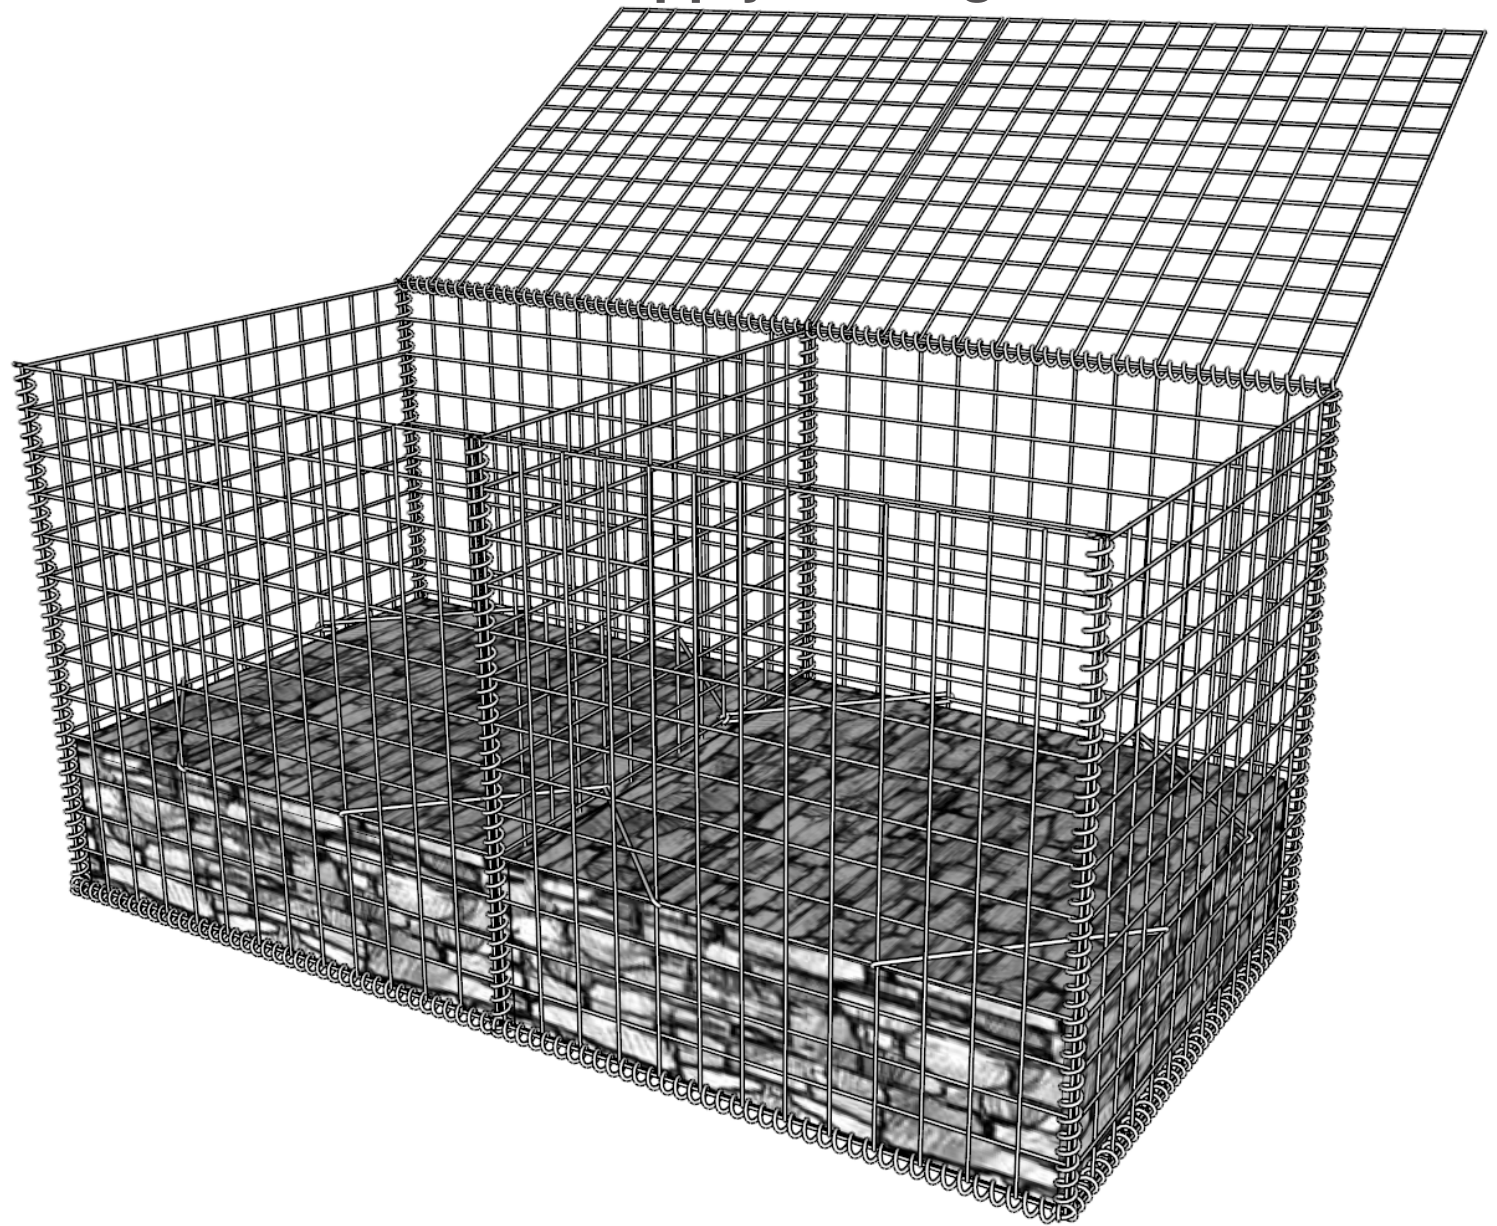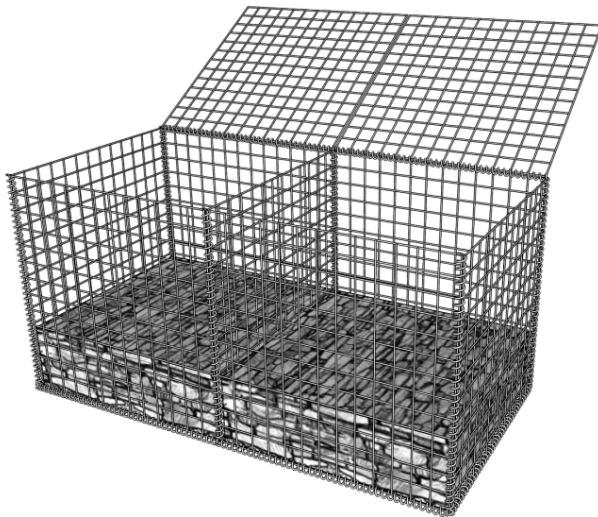

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464


Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com


B BETAFENCE



Step 7a : Apply Bracing Ties type 1 – Gabions Height > 1m


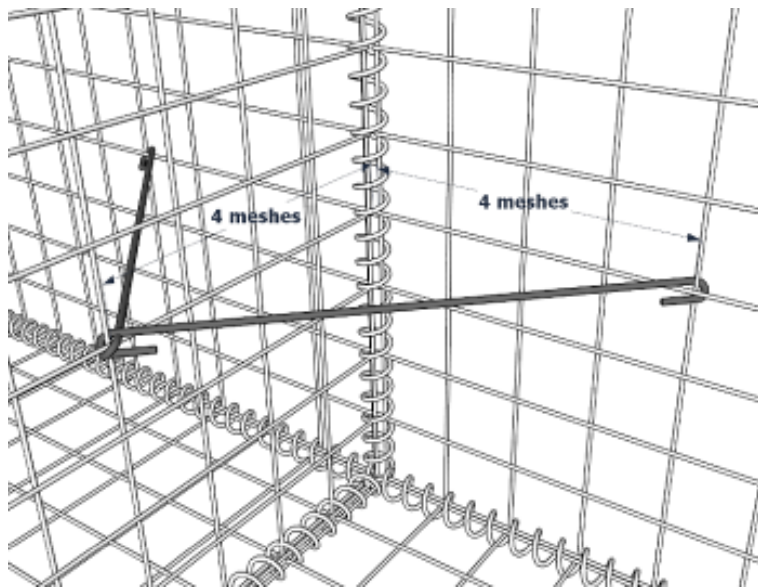


If the height is bigger then 0.5m (6meshes) place the bracing ties at 1/3 of the height.

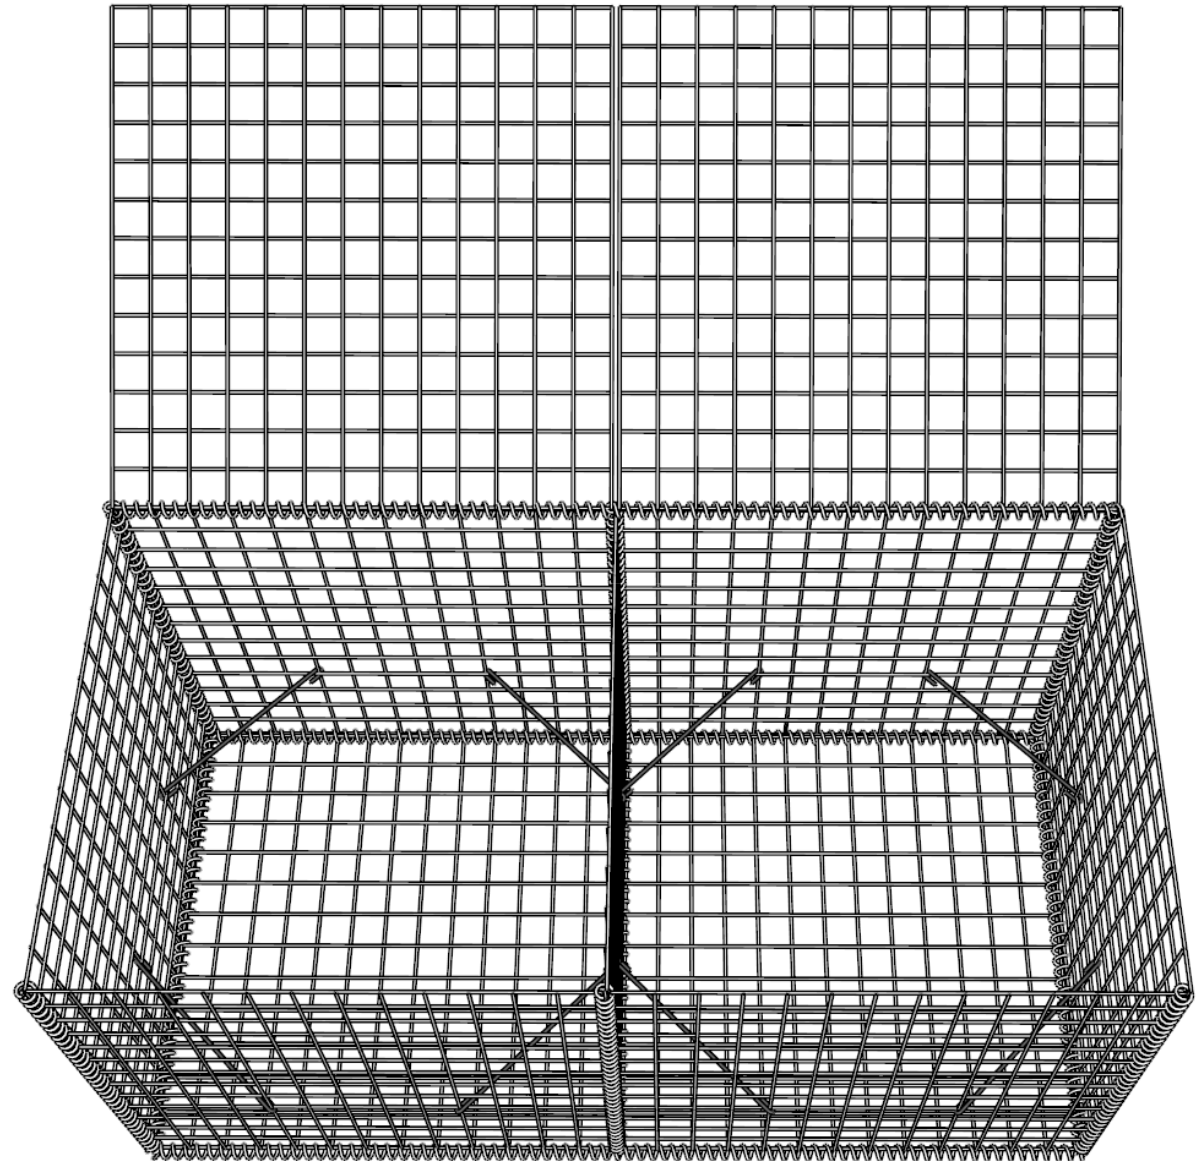



Step 7b : Apply Bracing Ties type 1 – Gabions Height < 0.5m

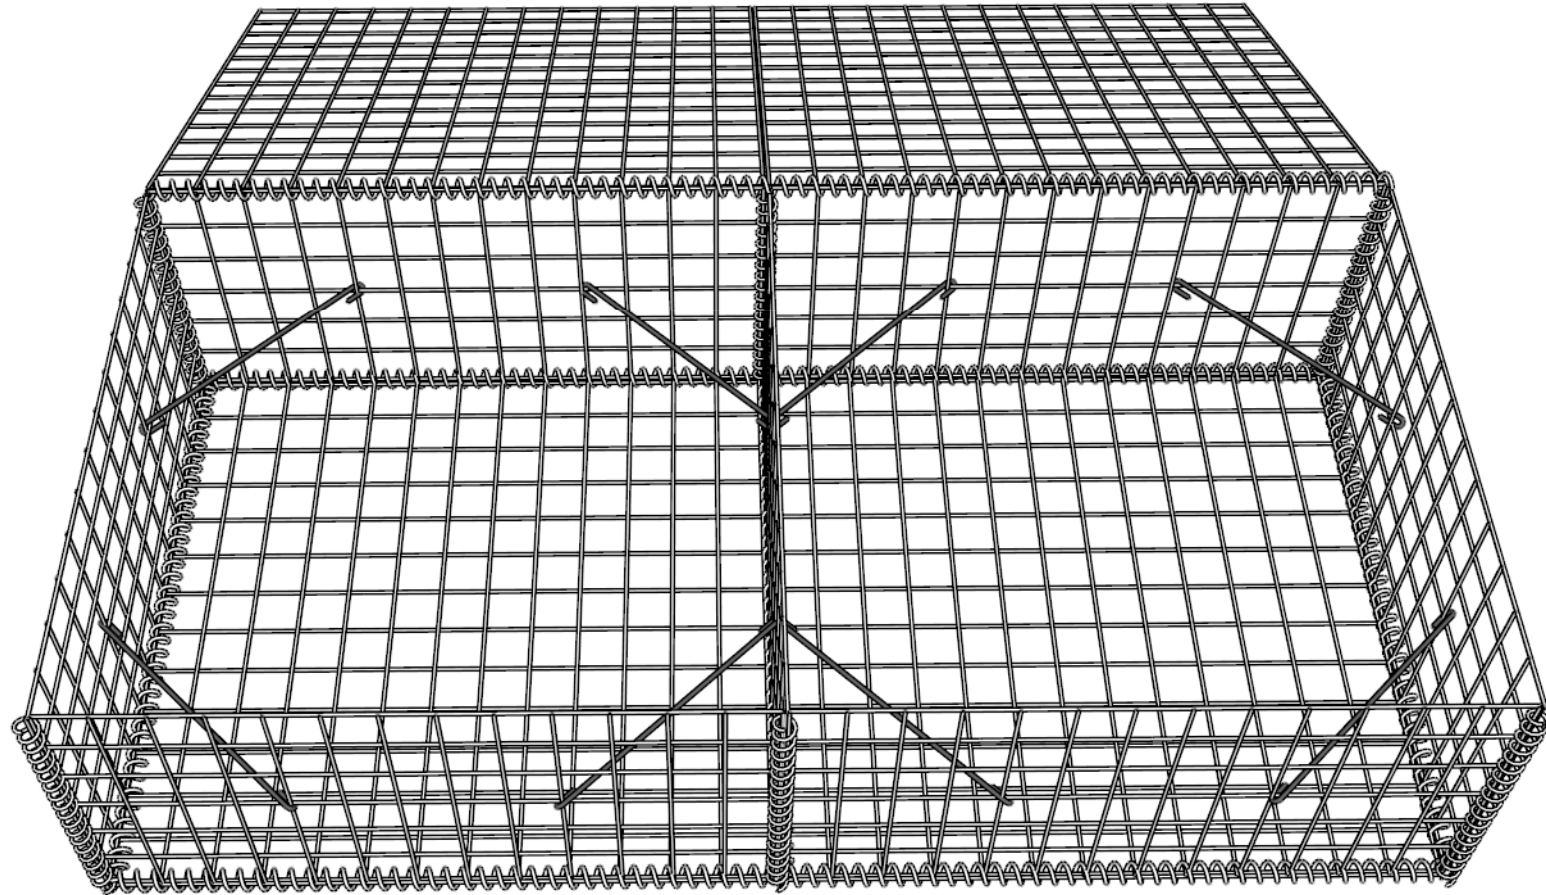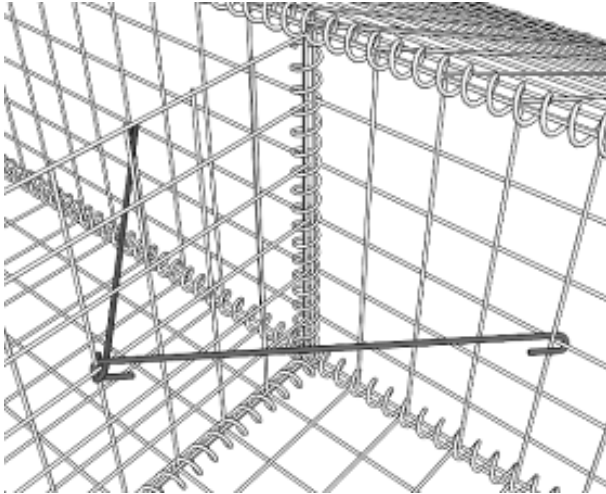

If the height is smaller than 0.5m (6meshes) place the bracing ties at 1/2 of the height.

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464

Tel : +32 (0) 56 73 46 64



frederique.eggermont@betafence.com

B BETAFENCE



Step 7c : Apply Bracing Ties type 2 – Gabions Width < 0.5m

If the width is smaller than 0.5m (6 meshes) place the bracing ties from front to back at 1/2 of the height and 1/3 from the sides.

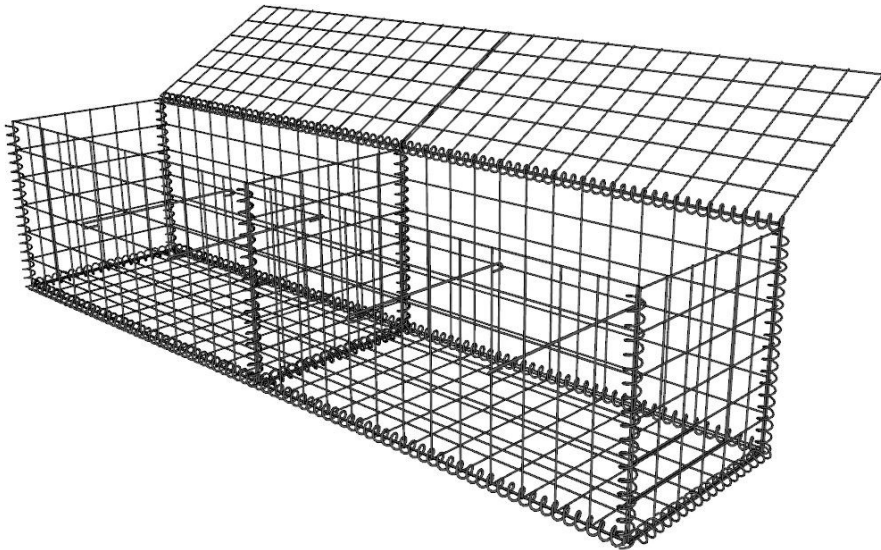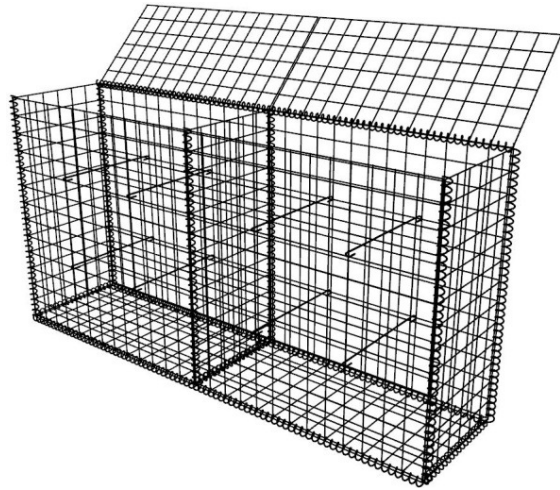

During the transition the contractor must check the number of bracing ties provided inside the Gabion.

1 x 0.5 x 0.5m : if 2 bracing ties are supplied , place them front to back. If 4 are supplied , place the in the corners.


1 x 0.5 x 1m : if 4 bracing ties are supplied , place them front to back. If 8 are supplied , place them in the corners.

2 x 0.5 x 0.5m : if 4 bracing ties are supplied , place them front to back. If 8 are supplied , place the in the corners.

2 x 0.5 x 1m : if 8 bracing ties are supplied , place them front to back. If 16 are supplied , place them in the corners.



Step 8 : Fill the second third and place the bracing ties.

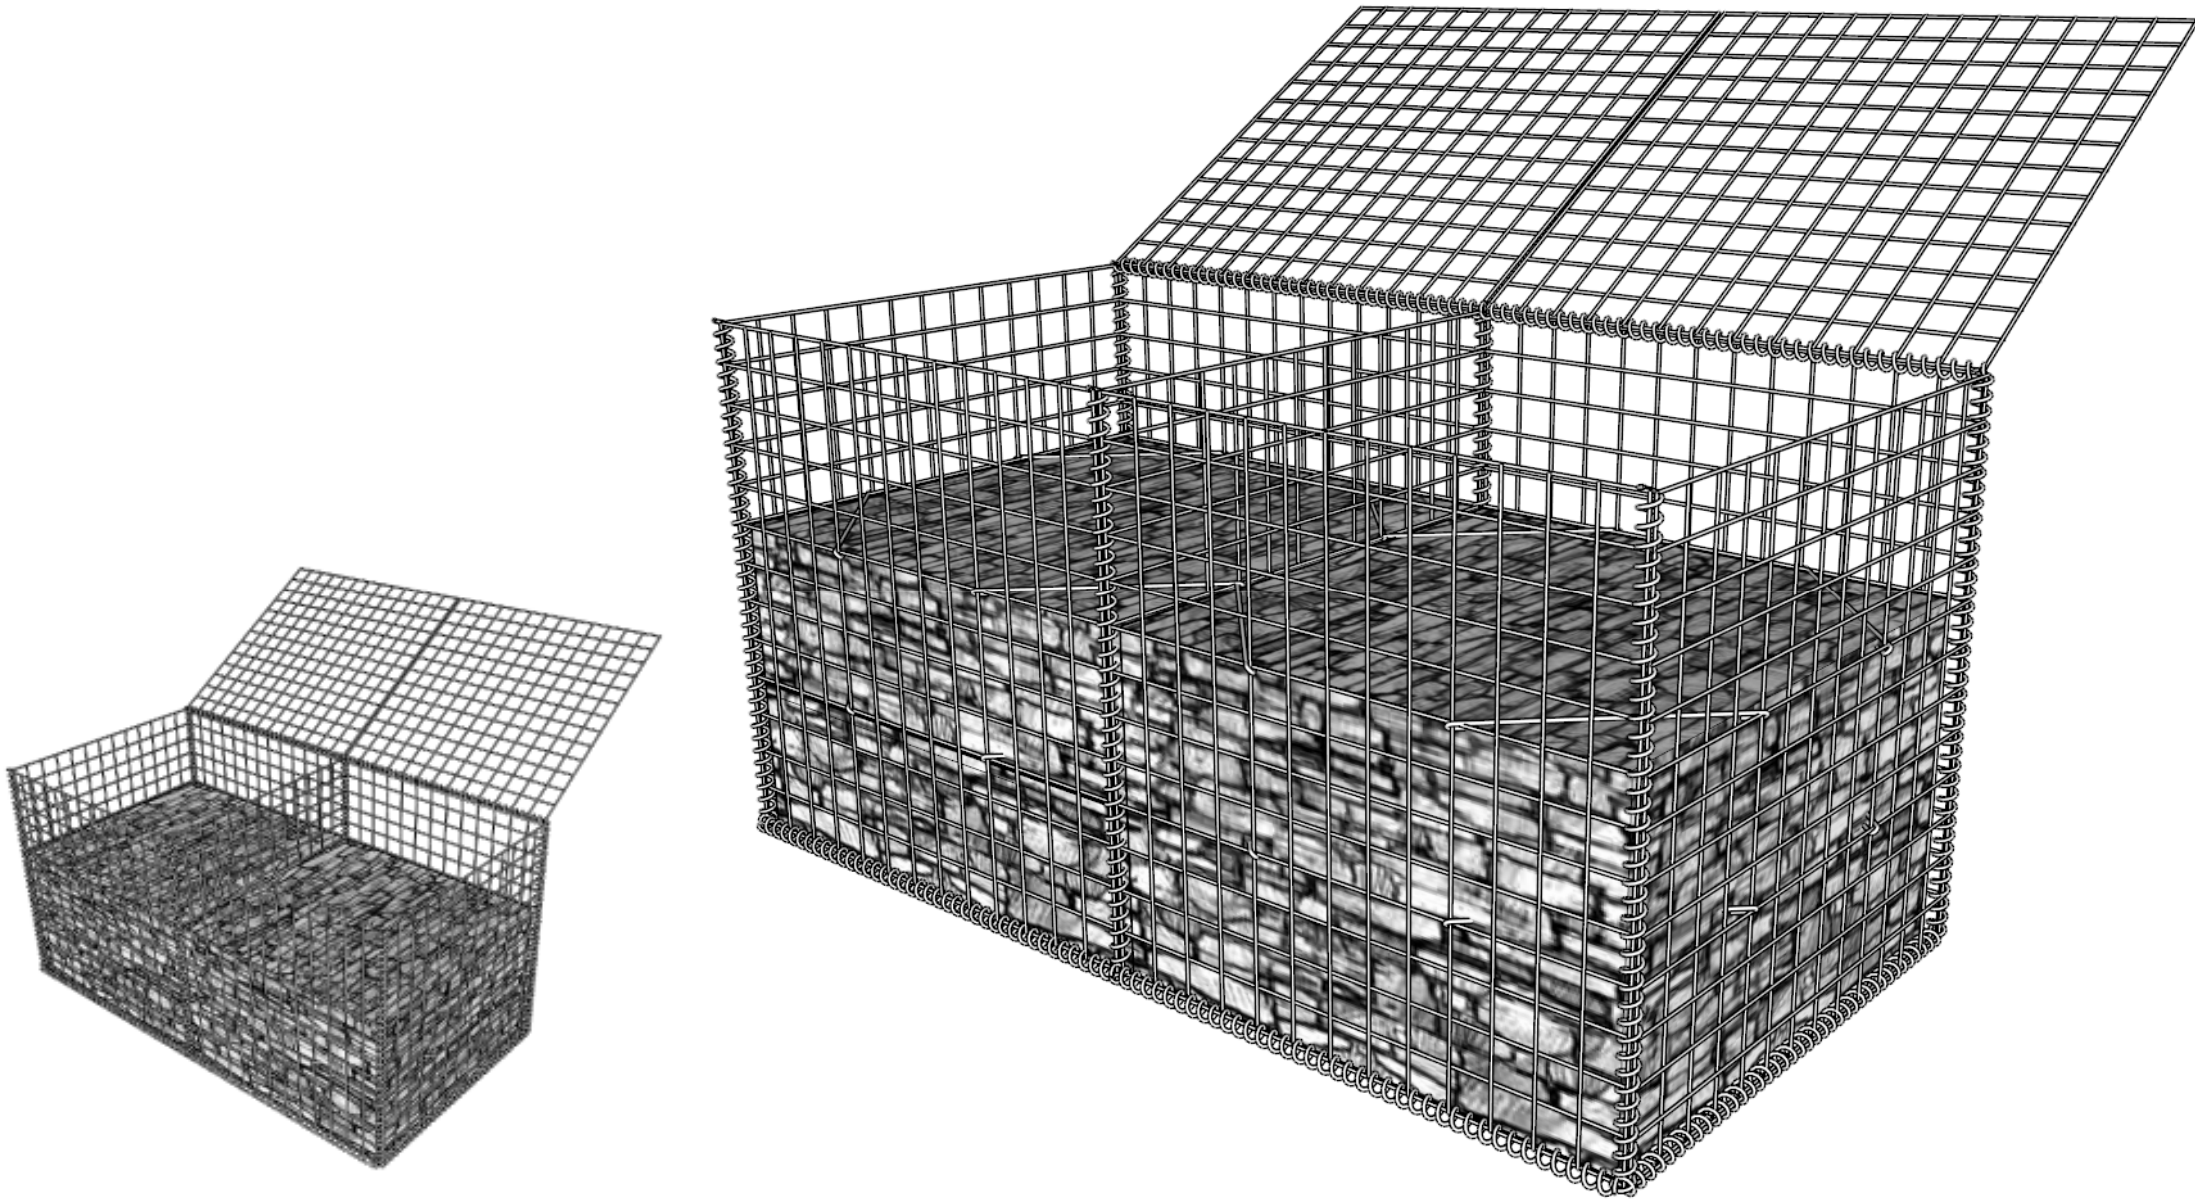

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464


Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com



B BETAFENCE



Step 8 : Fill the Gabion and close the lids

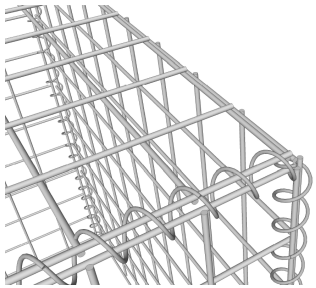

After installing the spirals ,
secure them by bending the
ends inwards with pliers.

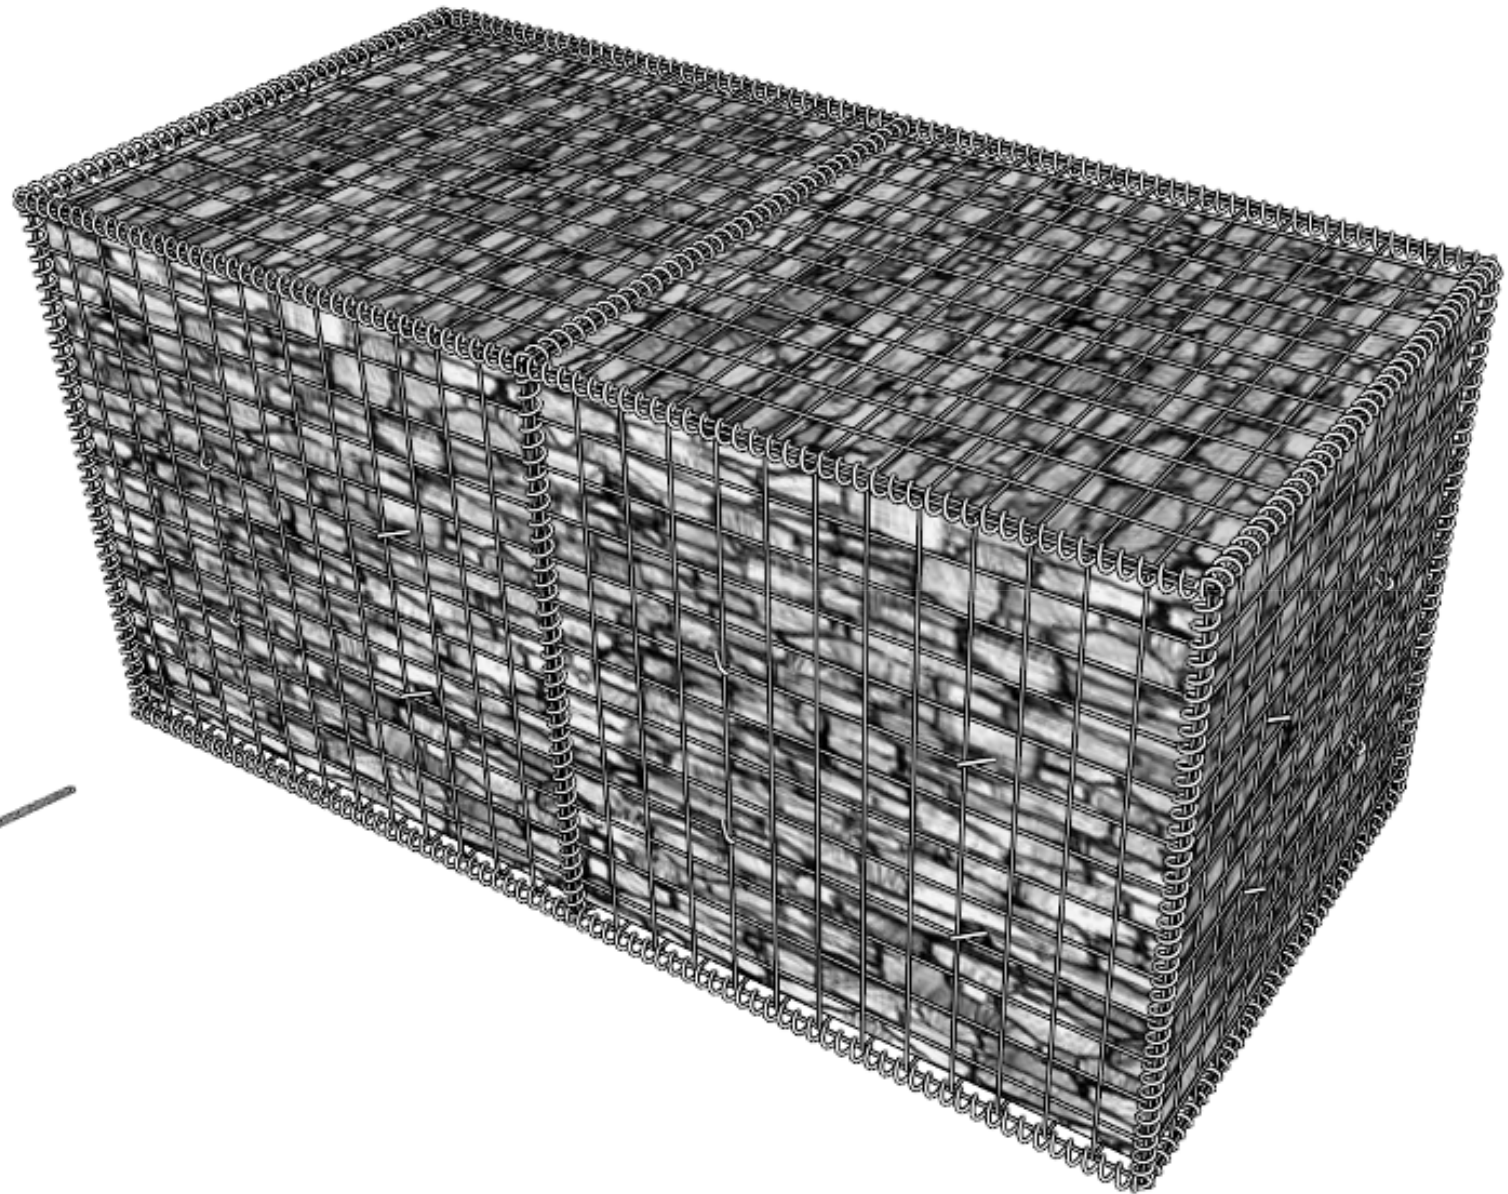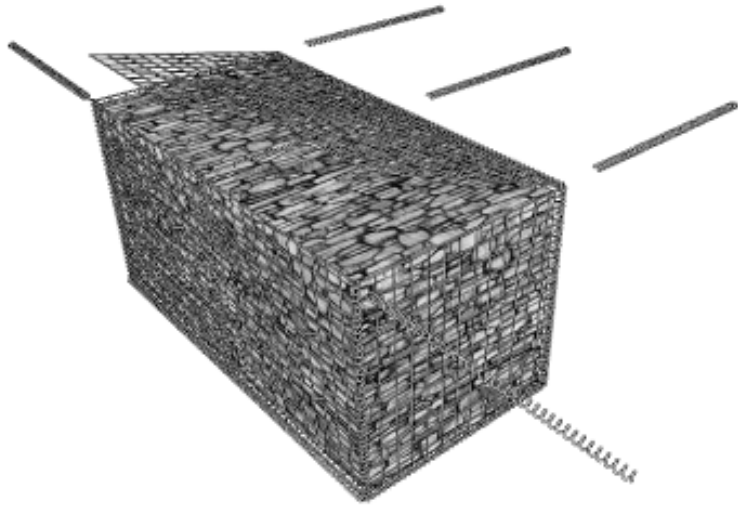

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464


Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com

B BETAFENCE





Step 9 : Joining 2 Gabions

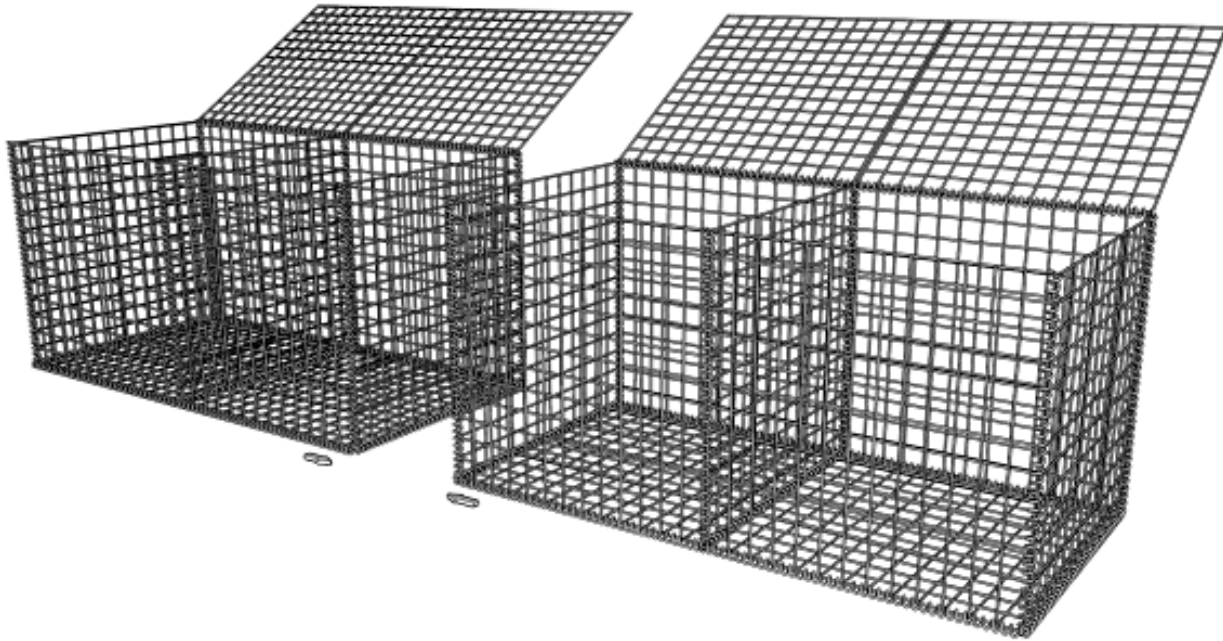

Insert the Joining pins in the section created interlocking the spirals. Always twist the ends inwards for safety reasons.

Push the spirals into each other.

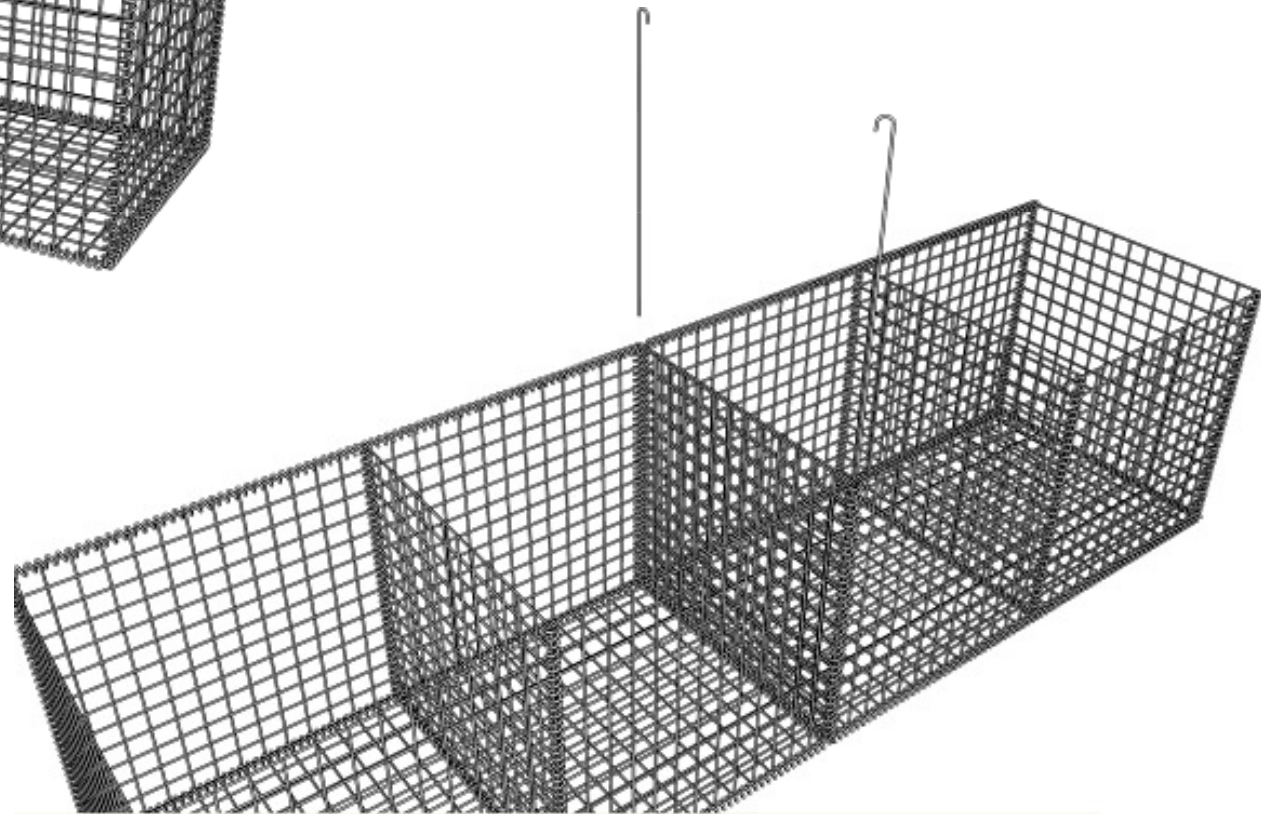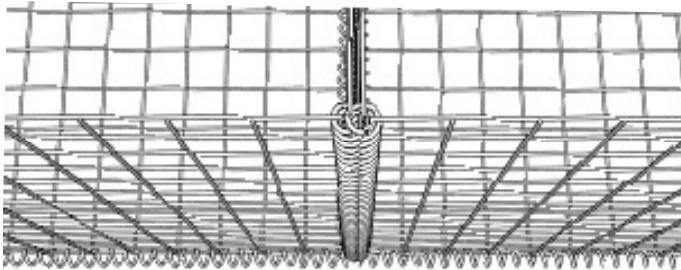

Eggermont Frédérique

Gabion Designer

GSM: +32 (0) 479 850 464

Tel : +32 (0) 56 73 46 64

frederique.eggermont@betafence.com

B BETAFENCE